

Peak Demand and Time-Differentiated Energy Savings

Cross-Cutting Protocol

~~Uniform Methods Project~~

Frank Stern, Navigant

Energy-efficiency savings are often expressed in terms of annual energy, presented as kWh/year. However, for a full assessment of the value of these savings, it is usually necessary to consider peak demand and time-differentiated savings.

1 Purpose of Peak Demand and Time-Differentiated Energy Savings

Energy efficiency may reduce peak demand and, consequently, the need for investment in new generation, transmission, and distribution systems. This reduction in the need for new investment —~~or also called “avoided capacity cost—costs”~~—has value, and ~~estimating to estimate~~ this value ~~usually requires estimating, it is necessary to estimate~~ peak demand savings. Peak demand savings are typically expressed as the average energy ~~usesavings~~ during a system’s peak period.

Avoided capacity costs can be a substantial portion of the value of an energy-efficiency measure, particularly for measures that produce savings coincident with the system peak. The need to estimate peak demand savings is becoming more important; as regional transmission organizations (RTOs, such as PJM and ISO-New England) allow energy-efficiency resources to bid into the forward-~~capacity markets and earn revenues~~¹. ~~Regionally specific transmission and distribution constraints can lead to regionally specific avoided costs and require consideration of regional peak demand savings.~~²

In addition to considering peak demand savings, evaluators often must calculate time-differentiated energy savings. This is because avoided energy costs are typically provided in terms of costing periods. These costing periods ~~breakdivide~~ the ~~8,7608760~~ hours of the year into periods with similar avoided energy costs. These costing periods, which are utility/RTO/ISO specific, tend to vary monthly, seasonally, and/or in terms of time of day (peak, off-peak, super-peak)³.

Calculating load impacts on an hourly basis provides flexibility in applying the results to a variety of costing period definitions (~~TecMarket Works 2004~~). The cost period used can


¹ ~~These markets are where the regional transmission markets obtain the resources for ensuring system reliability. Providers of energy efficiency can bid into these markets on an equivalent basis to supply-side resources. Bids must be backed up by measurement and verification.~~

² ~~These are where the regional transmission markets obtain the resources for ensuring system reliability. Providers of energy efficiency can bid into these markets on an equivalent basis to supply-side resources. Bids must be supported by measurement and verification.~~

³ ~~Avoided energy costs tend to be higher during periods of higher demand because generating units available during those times tend to have lower efficiency and higher operating costs.~~

significantly affect the value of the energy savings. For example, a measure that reduced energy mostly at night is not as valuable as one that reduced energy mostly during summer afternoons, as shown in Figure 1.

Figure 1. Consideration of Time-Differentiation in Energy Savings Significantly Affects Estimates of the Value Savings

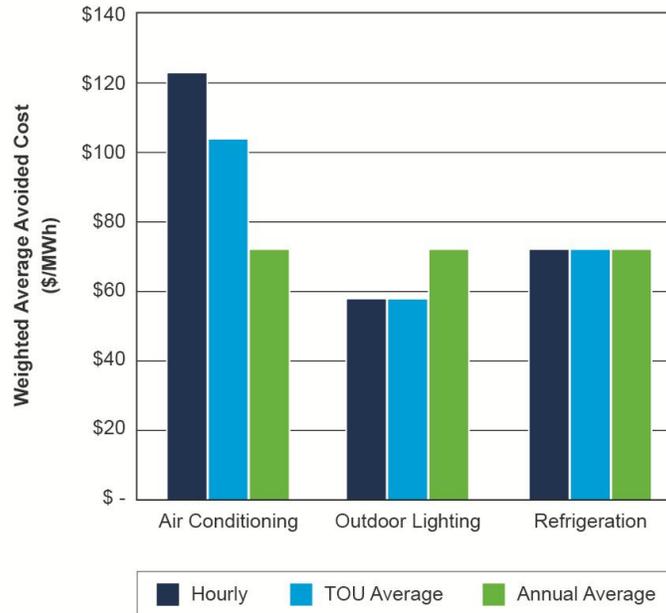

Source: (U.S. Environmental Protection Agency and Department of Energy 2006)

For As another example, air-conditioning efficiency has higher value when hourly savings and costs are considered, because usage is higher when avoided costs are higher. Outdoor lighting, however, has lower value values when hourly savings and costs are considered, because that usage is typically off-peak.

Peak demand and time-differentiated energy impacts are more difficult to measure than annual energy savings impacts (York 2007), so additional metering or simulation analysis may be needed to estimate these impacts accurately. Peak demand savings and time-differentiated energy savings can be estimated with:

- Measured directly through metering,
- Estimated through Engineering algorithms,
- Hourly building simulation modeling,
- Interval meter data analysis,
- End-use metered data analysis,
- Survey data on hour of use, or
- Determined by using an hourly load shape (when one is available) to “convert” energy savings into peak demand impacts.



- Combined approaches.

Peak savings are ~~measured~~estimated over a peak period, ~~during which peak demand savings are estimated.~~ This period can range from one hour per year to several hours per weekday during a season.

2 Key Concepts

Understanding demand savings requires understanding the relationship among several factors, as shown in Figure 2.

Figure 2. Demand Savings Relationships

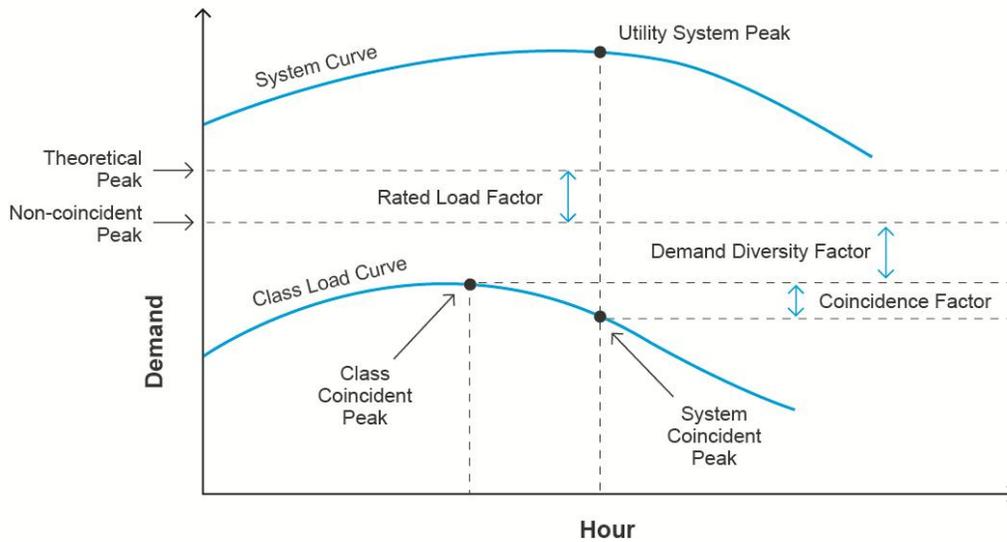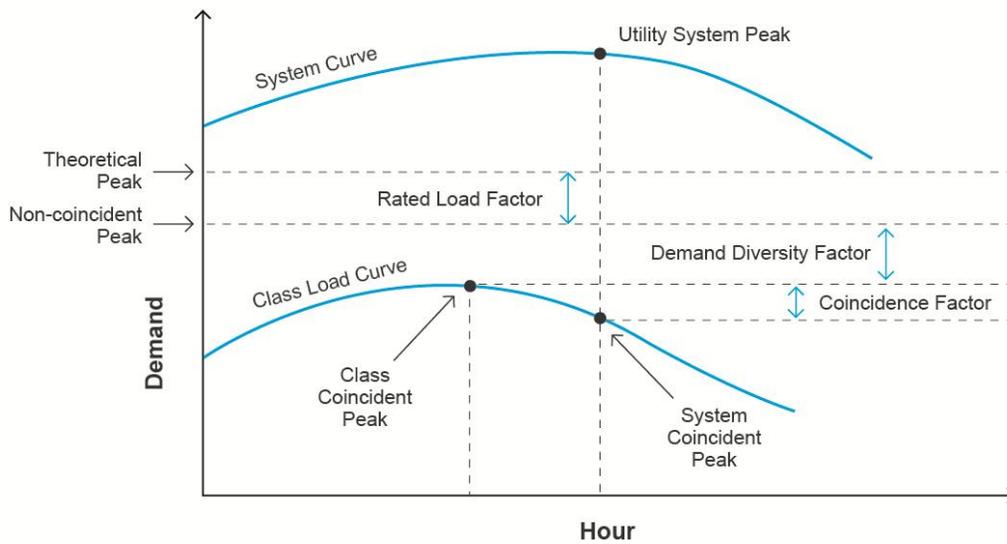

Source: (Jacobs 1993)

Note: Rated load factor, demand diversity factor, and coincidence factor are sometimes combined and ~~called~~referred to as “coincidence factor.”

These brief definitions describe the key factors.

- **Peak period** ~~is the~~. The period during which peak demand savings are estimated. (As previously noted, this period can range from one hour per year to several hours per weekday during a season.) -Some utilities have a winter and summer peak ~~periods~~period.
- **Theoretical peak** is the usage of a population of equipment if all were operating at nameplate capacity.
- **Non-coincident peak** is the sum ~~—at any time—~~ of the individual maximum ~~demand~~demands regardless of ~~a population~~time of ~~equipment~~occurrence within a specified period.
- **Rated load factor (RLF)** is the ratio of maximum operating demand of a population of equipment to the nameplate power ~~or~~/capacity. It is the ratio of non-coincident peak to theoretical peak. For example, a building that dims its lamps to 90% of their output has ~~an~~a RLF of 0.9.
- **Demand diversity factor** is the ratio of the peak demand of a population of units to the sum of the non-coincident peak demands of all individual units. While an individual efficiency technology may save a certain amount of demand, those technologies are not all operating at the same time across all buildings throughout the region. For example, if a maximum of 7 of 10 installed CFLs are on at any given time, then the diversity factor is 0.7.
- **Coincidence factor** is the fraction of the peak demand of a population that is in operation at the time of system peak. Thus, it is the ratio of the population's demand at the time of the system peak to its non-coincident peak demand. The peak demand use for a given building and end use ~~may or may~~are typically not ~~be~~ aligned exactly with the utility system peak, which is how the avoided ~~cost~~peak demand is defined. For example, if at the time of system peak, only ~~three~~3 of the ~~seven~~7 CFLs mentioned above are on, then the coincidence factor is 3/7.

Some technical references use the term “coincidence factor” to mean the product of rated load factor, demand diversity factor, and coincidence factor. NEEP defines it as, “The ratio of the average hourly demand during a specified period of time of a group of electrical appliances or consumers to the sum of their individual maximum demands (or connected loads) within the same period.” (Northeast Energy Efficiency Partnership 2011).

The following terms are also important to understanding the concepts of peak demand.

- **Average (or ~~annual average~~Annual Average) megawatt (MWa or aMW).** One megawatt of capacity produced continuously over a period of one year. $1 \text{ aMW} = 1 \text{ MW} \times 8760 \text{ hours/year} = 8760 \text{ MWh}$

- **Load factor.** ~~Ratio~~The ratio of average energy savings to peak energy savings. This is also known as “peak coincidence factor” (NYSERDA 2008). More generally, load factor is the average demand divided by any number of peak demands, such as load factor at the time of system peak and load factor at the time of non-coincident peak.

$$\text{Conservation Load factor} = \frac{\text{Energy savings}}{\text{Peak demand savings} \times 8760 \text{ hours}}$$

- **Loss of load probability (LOLP).** The likelihood that a system will be unable to meet demand requirements during a period. LOLP can be used to distribute avoided capacity costs to each hour of the year.

3 Methods of Determining Peak Demand and Time-Differentiated Energy Impacts

Estimating peak demand and time-differentiated energy savings may require different techniques than estimating annual energy savings. For example, the method used ~~for estimating to estimate~~ demand savings may not be the most appropriate ~~for method to estimate~~ energy ~~saving,~~ savings—and vice versa (Fels 1993). ~~Also, approaches~~

Approaches can also be combined to leverage available information. Some approaches for estimating annual energy savings (such as monthly billing data analysis) ~~will do~~ not provide peak demand savings directly, ~~although.~~ However, these other approaches can be used with load shapes for analyzing peak impact ~~analysis.~~

3.1 Engineering ~~algorithms~~ Algorithms

Peak demand savings can be estimated using algorithms ~~such,~~ as ~~is~~ shown in Equation 1 ~~Equation 1~~. This equation is similar to those used for energy savings, ~~(shown in Equation 2~~ Equation 2), except that the demand equation has diversity factor and coincidence factor in place of the full load hours.

Equation 1. Basic Demand Savings Equation

$$\Delta kW_{gross} = \text{units} \times RLF \times \left[\left(\frac{kW}{\text{unit}} \right)_{base} - \left(\frac{kW}{\text{unit}} \right)_{ee} \right] \times DF \times CF \times (1 + HVAC_d)$$

Where:

ΔkW_{gross}	=	gross demand savings
Units	=	units of measure installed in the program
RLF	=	rated load factor
kW/unit	=	unit demand of measure
DF	=	diversity factor
CF	=	coincidence factor
$HVAC_d$	=	HVAC system interaction factor for demand

Source: (TecMarket Works 2004)

Equation 2. Basic Energy Savings Equation

$$\Delta kWh_{gross} = units \times RLF \times \left[\left(\frac{kW}{unit} \right)_{base} - \left(\frac{kW}{unit} \right)_{ee} \right] \times FLH \times (1 + HVAC_c)$$

Source: (TecMarket Works 2004)

3.2 Hourly ~~building simulation modeling~~ **Building Simulation Modeling**

Hourly building simulation modeling (IPMVP⁴ Option D) can produce hourly savings estimates for whole buildings as well as for specific end-uses. Consequently, it is an excellent means of estimating peak demand and time-differentiated energy savings. Simulation modeling is described in Section XX. A building energy simulation model combines building characteristic data and weather data to calculate energy flows. While hourly models calculate energy consumption at a high frequency, non-hourly models may use simplified monthly or annual degree day or degree hour methods.

Simulation models are most applicable for HVAC, shell measures, and the interactive effects of HVAC with other measures. Simulation modeling requires an experienced modeler with an understanding of energy engineering. Hundreds of building energy simulation programs have been developed over the past 50 years (Crawley 2005).

Note that using this method does not necessarily provide an estimate of diversified demand. If a single, typical building is used, demand savings would be overstated due to lack of consideration of diversity, which tends to smooth out spikes in usage seen in individual buildings.

Consideration of diversity requires either using average schedules or simulating a sample of buildings with different-size buildings sizes, climate, and schedules.

3.3 Billing ~~data analysis~~ **Data Analysis**

Billing data analysis can be used to develop monthly estimates of savings. Billing data analysis (IPMVP Option C) can be used to develop monthly estimates of savings. (Billing analysis is discussed in the Whole-Building Retrofit Evaluation Protocol section.) This type of analysis entails statistical comparison of pre- and post-participation and/or participant and nonparticipant billing data to estimate savings. Complex statistical analysis may be required to control for non-programmatic influences, such as weather and economic conditions. Also, isolating the impacts of a specific measure can be difficult because the meter measures usage for an entire building.

Although the coincident peak is usually not reported, billing analysis is useful in estimating non-coincident peak demand when the data include monthly building peak demand for each costing period. BillingIn addition, billing data analysis can be used to derive a realization rate on an engineering algorithm for energy savings that may also be applied to a demand savings algorithm.

3.4 Interval ~~meter data analysis~~ **Metered Data Analysis**

IntervalUtility revenue interval meters can measure usage at 15-minute increments of 15 minutes or less, and the proliferation of smart. Since consumption during different periods may

⁴ International Performance Measurement and Verification Protocol (IPMVP), which is considered the gold standard for evaluating energy-efficiency programs.

~~be billed at different rates, these meters has resulted in an additional source of~~ provide a means for analyzing a customer's load pattern. Interval meter data analysis is essentially the billing data for many customers. ~~However, analysis discussed above but with a finer time resolution.~~

~~As with billing analysis, isolating the impacts of a specific measure can be difficult because the meters measure usage for an entire building. Also, complex, and~~ statistical analysis may be required; to control for non-programmatic influences ~~such as weather and economic conditions.~~ With the advent of advanced metering infrastructure and the availability of obtaining hourly information, there may be additional statistical approaches (such as conditional demand type analysis on hourly data) that could be used to help develop estimates of demand savings.

3.5 End-use Metered Data Analysis

3.5 End-use metering data analysis

~~While end-use metering (IPMVP Option A and Option B) can be an excellent means of estimating peak demand or time-differentiated energy savings, As with billing and interval data analysis, end-use metering data analysis entails a statistical comparison of pre- and post-participation and/or participant and non-participant billing data. However, end-use metering eliminates most—if not all—of the difficulty of isolating the impacts of specific measures.~~

There are several cautions ~~should be considered~~ to consider:

- Savings should be normalized for weather and other confounding factors.
- Pre-installation meter data is difficult to obtain ~~due to~~ because of the logistics entailed in coordinating with customers. Without pre-installation data, baseline conditions must be estimated with engineering algorithms.
- End-use metering is costly, so it should be conducted strategically.
- An ~~energy efficiency impact~~ load shape may be different ~~from an end-use~~ than a post-participation load shape. For example, lighting control impact shapes are entirely different from the shape of the controlled lighting. (End uses have shapes with and without the efficiency measures in place and the difference is the impact shape.) Determination of some energy-efficiency shapes may require either pre-installation metering or reconstruction of the baseline shape.
- Sampling must be done carefully —see the Sampling Cross-cutting Protocol.
- The evaluator must consider the period over which ~~metering is necessary to meter.~~ How much time is required? Is a certain ~~period, e.g., time, such as~~ summer, critical?

The American Society of Heating, Refrigerating, and Air-Conditioning Engineers has developed a methodology to derive the diversity factors and provide the typical load shapes of lighting and receptacle loads for office buildings using end-use metered data (Abushakra 2001).

3.6 Survey data Data on hours Hours of use Use

Evaluators may ~~use~~ conduct hours-of-use surveys to identify the ~~time~~ times of day ~~that~~ when equipment is ~~in use~~ used. For example, a survey might ask if residential compact fluorescent

~~lamps fluorescents~~ are used during the summer from 3:00 p.m. to 6:00 p.m., a typical period for system peak. If the results indicate that 5% of lights were in use at that time, then the combination of the coincidence and diversity factors would be 5%. ~~However, relying on customer perception may result in significant inaccuracy.~~

Survey sampling should be done in conjunction with the techniques described in the Sampling Cross-Cutting Protocol section. However, relying on customer perception may result in significant inaccuracy.

3.7 Combined ~~approaches~~ Approaches

Applying a combination of approaches facilitates using data from several sources to provide the best estimates of demand savings. For example, for a low-income program, billing data may be the best approach for estimating energy savings. Engineering algorithms can be used to develop energy and demand savings for each participant, and these participant energy savings can be ~~used as the~~ independent variables in a statistically adjusted engineering (SAE) billing analysis (~~see Section. (See the protocol titled~~ Whole-House Retrofit~~).~~) The realization rate from the SAE analysis can ~~be~~ then ~~be~~ applied to the population demand estimate from the engineering model.

Combined approaches also include nested samples where a smaller number of metered sites is used to calibrate telephone surveys from a much larger population. For example, a sample of 30 metered sites may yield a combined coincidence and diversity factor of 6.1%, while the telephone survey produced an estimate of 5.0% for the metered sample and 5.5% for the entire telephone sample. The ratio of 6.1% to 5.0% would be applied to the 5.5% telephone sample estimate, resulting in an adjusted factor of 6.7%.

3.84 Summary of ~~approaches~~ Approaches

| ~~Table 1~~ Table 1 presents a summary of the approaches in terms of relative cost and relative potential accuracy. In all cases, the accuracy achieved depends on the quality of the analysis.

|

Table 1. Summary of Approaches

Approach	Relative Cost	Relative Potential Accuracy	Comments
Engineering Algorithms	Low	Low-Moderate	Accuracy depends on the quality of the input assumptions as well as the algorithm
Hourly Simulation Modeling	Moderate	Moderate	Input assumptions are again important – garbage in, garbage out. <u>Appropriate for HVAC and shell measures, and HVAC interaction</u>
Billing Data Analysis	Moderate	Moderate	Typically not useful for peak demand or on/off peak energy analysis.
Interval Meter Data Analysis	Moderate	High	Interval meter data not available for many customers. <u>Becoming more feasible with proliferation of AMI.</u>
End-Use Metered Data Analysis	High	High	Requires careful sampling and consideration of period to be metered.

4.5 Secondary Sources

~~Evaluators~~ Because of budget or time constraints, evaluators may choose to rely on secondary sources, rather than on the primary sources listed above, ~~due to budget or time constraints.~~

4.15.1 Technical ~~reference manuals~~ **Reference Manuals**

A technical reference manual (TRM) specifies savings or protocols for common energy-efficiency measures. A TRM is not a method for estimating savings, but a source of estimates or methods. ~~TRMs specify savings or protocols for a variety of common energy-efficiency measures.~~ Typically, TRMs provide deemed savings values that represent approved estimates of energy and demand savings. These savings are based on a regional average for the population of participants; however, they are not savings for a particular installation.

Although TRMs often provide industry-accepted algorithms for calculating savings. ~~However,~~ users should not assume that because an algorithm has been used elsewhere it is correct. Mistakes are common and should be expected.

4.25.2 Application of ~~standard load shapes~~ **Standard Load Shapes**

By applying load shapes to allocate energy consumption into ~~the~~ costing period, ~~the evaluator can also estimate~~ peak demand and time-differentiated energy savings can also be estimated from energy impacts. A key ~~source for~~ resource of load shape data is the California Database for Energy Efficiency Resources (California Public Utility Commission 2011). These shapes may be

derived from metering or simulation. The evaluator must consider the applicability of the shapes when climate-sensitive end-uses are involved.

56 References and Resources

[Abushakra, B., A. Sreshthaputra, J. Haberl, C. Clairidge. *Compilation of Diversity Factors and Schedules for Energy and Cooling Load Calculations.* ASHRAE, 2001.](#)

California Public Utility Commission. "Database on Energy Efficient Resources." 2011.

[Crawley, D., J. Hand, M. Kummert, B. Griffith. *Contrasting the Capabilities of Building Energy Performance Simulation Programs.* U.S. Department of Energy, 2005.](#)

Fels, M. and K. Keating. *Measurement of Energy Savings from Demand Side Management Programs in U.S. Electric Utilities.* Annual Review of Energy and the Environment, 1993.

Jacobs, P., M. Arney, M. Keneipp, and M. Eldridge. *Engineering Methods for Estimating the Impacts of Demand-Side Management Programs.* Pleasant Hill, CA: Electric Power Research Institute, 1993.

Keating, M. Fels and K. *Measurement of Energy Savings from Demand Side Management Programs in U.S. Electric Utilities.* Annual Review of Energy and the Environment, 1993.

[Northeast Energy Efficiency Partnership. "Glossary of Terms: A Project of the Regional EM&V Forum." 2011.](#)

NYSERDA. "Energy Efficiency Portfolio Standard Administrator Proposal." 2008.

TecMarket Works. *California Evaluation Framework.* Sacramento: California Public Utilities Commission, 2004.

U.S. Environmental Protection Agency, and Department of Energy. "National Action Plan for Energy Efficiency." Washington, DC, 2006.

York, D, M. Kushler, P. Witte. *Examining the Peak Demand Impacts of Energy Efficiency: A Review of Program Experience and Industry Practice.* Washington, DC: American Council for an Energy Efficient Economy, 2007.